The Bamo electrodes and/or cable can be used with other pH meters, as long as the fitting works!

For example:

If you want to use your own cable:



Bamo electrodes have a **S8** connector



So you must make sure to have correct connector **9054** on the cable

Same goes with the wiring to the pH meter. The coaxial cable is like this



So depending on the way it must be connected into the pH meter, you can have to adapt:

For example on Bamo wall mounted BAMOPHAR, the cable must just be correctly cut and prepared, no need for extra adaptor




But the panel mounted version has a rear connector so we just provide additional **9054** connector with cable.

But on some pH meters the connection is simple terminal blocks so in this case you would have to connect THIS TO THIS





In this case there would be a solution:

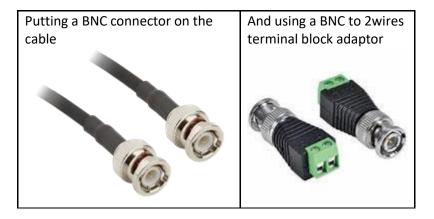

But Bamo does not support this scenario, as the more connectors you had to the cable, the more disturbed the pH signal can get.